

TECHNICAL INFORMATION

High Performance XE Filter range

The Carlson XE range of products comprises a comprehensive series of high performance filter sheets designed to meet the needs of a range of specialist applications.

All filter sheets within the XE range are formulated with several important benefits in mind:

All XE filter sheets incorporate an advanced blend of selected and processed bleached cellulose fibres combined with non-hazardous filter-aids and approved resins to produce filter media with superior filtration capabilities in conjunction with excellent wet and dry handling characteristics.

All the raw materials used in the manufacture of XE products are carefully selected and monitored to ensure their compatibility with beverages and food products.

All XE products are made to the same carefully controlled thickness specification so that the different grades can be used in the same filter press configuration and seal thickness.


Edge leakage is reduced to a minimum because of the special XE filter sheet formulation and processing conditions.

XE filtration sheets are widely used in the filtration of products where they give outstanding clarity and stability combined with long sheet life and integrity.

Typical applications of the XE range include spirits, wines, beers and lagers where long life, sterility, stability and clarity are essential. Similarly, XE products have found wide acceptance in the filtration of syrups for soft drinks, gelatines and cosmetics, plus a diverse spread of chemical and pharmaceutical intermediates and final products.

Typical particle retention values of XE range (um)

GRADE	MIN	RANGE	MAX
XE1700H	0.1	0.2	0.3
XE1200H	0.2	0.2	0.4
XE900H	0.4	0.1	0.5
XE675H	0.4	0.2	0.6
XE400H	0.5	0.3	0.8
XE280H	0.5	1	1.5
XE200H	1.5	1	2.5
XE150H	3	4	7
XE90H	4	5	9
XE80H	5	5	10
XE70H	5	7	12
XE50H	6	9	15
XE20H	8	12	20
XE10H	9	13	22
XE5	10.5	14.5	25

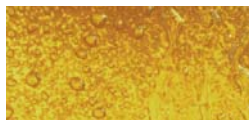

Physical Data

Test Properties	Basic Weight	Thickness	Density	% Ash Content	Permeability	
					Units	g/m ²
XE5	790	3.60	0.219	1		622
XE10H	1040	3.75	0.277	20	1114	220
XE20H	1050	3.75	0.280	30	1108	162
XE40H	1275	4.10	0.311	43	1105	133
XE50H	1150	3.75	0.307	39	705	64
XE70H	1140	3.75	0.304	50	553	46
XE80H	1160	3.75	0.309	44	532	46
XE90H	1190	3.75	0.321	57	424	31
XE150H	1235	3.75	0.333	56	345	22
XE200H	1265	3.75	0.341	52	254	16
XE280H	1290	3.75	0.350	52	195	12
XE400H	1325	3.75	0.357	54	158	7.9
XE675H	1375	3.75	0.371	56	72	5.1
XE900H	1375	3.75	0.371	56	55	3.9
XE1200H	1400	3.80	0.369	50	47	
XE1700H	1450	3.80	0.383	50	24	

• The following figures are nominal values, for specifications contact your representative.

Instructions for correct use

When inserting into the filter press handle the filter sheets with care to eliminate distortion or abrasion. Never use a damaged filter sheet.

Insertion of depth filter sheets


To ensure correct use place the smooth side of the filter sheet against the filtration plate (i.e downstream). The rough side of the filter sheet faces the liquid to be filtered (i.e upstream).

Filter preparation

Prior to the first filtration it is recommended where possible to pre-rinse the closed filter with approximately 50 litres of water per m² at 1.25 times the flow rate. During pre-rinsing check for leakage, re-tighten to eliminate if necessary.

Sterilisation

Carlson range of XE filter sheets may be sterilised with saturated steam or hot water. The pressed filter pack has to be loosened slightly to ensure that the steam has entirely sterilised the system. Final pressure should only be applied to the filter package once the entire filter has cooled down.

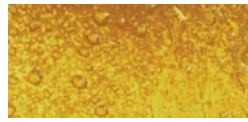

Sterilisation with steam:

Steam quality:	Steam has to be free of foreign particles and impurities
Temperature:	max 134 ^o c (saturated steam)
Duration	20minutes

Sterilisation with hot water:

Water quality:	The water should be softened and be free of impurities
Temperature:	80-85 ^o c
Duration:	20 minutes

Sheet flushing

The Carlson range of XE filter sheets can be forward and back washed using softened water to extend the life and reduce the costs of filtration. This is, however, very much dependent upon the application and filtration conditions.

Regeneration procedure:

Cold rinsing:	in direction of filtration for approximately 5-10 minutes
Temperature	15-20 ^o c
Hot rinsing;	forward or reverse direction of filtration for approximately 10 minutes
Temperature	60-80 ^o c

Safety and disposal

Used under the correct conditions the Carlson range of XE filter sheets have no known negative effects and can be disposed of through normal route, observing local and official regulations. Consult MSDS for further information.

Storage

Store in a place which is dry, cool and free from strong odours.

Forms of supply

XE range of filter sheets are available in all customary sizes, hygienically shrink-wrapped and packed in cardboard boxes. Special formats are available on request.

Remarks

All Carlson Filtration Ltd filter sheets are manufactured in accordance with BfR recommendation XXXV1/1 (regulations regarding paper and board designed for contact with foodstuffs) and EC Regulation No 1935/2004 (materials and articles intended to come into contact with food).

All our products are made according to the rules of Quality Management System EN ISO 9001:2008

We provide information and advice to the best of our knowledge. This information cannot be binding in every case on account of the variety of applications, work methods and operating conditions. We, therefore, cannot assume liability for improper use.

Purity through quality™ since 1923

